




# LTSERIES MAGNETIC LINEAR SENSOR

“Quick Connection Guide”

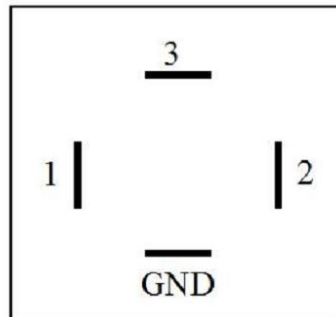


Connections	
Pin 1	B Output Signal
Pin 2	A Output Signal
Pin 3	+Supply Voltage (TTL:+5 VDC or PPL: +10...30VDC)
Pin 4	0V

**Note:** Make sure that the cable to be connected is shielded by the panel in order not to be affected by external noises.



# LTSERIES MAGNETIC LINEAR SENSOR

“Quick Connection Guide”

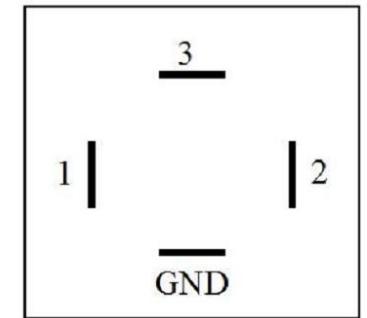

Connections	
Pin 1	B Output Signal
Pin 2	A Output Signal
Pin 3	+Supply Voltage (TTL:+5 VDC or PPL: +10...30VDC)
Pin 4	0V

**Note:** Make sure that the cable to be connected is shielded by the panel in order not to be affected by external noises.